150W Car / Plane®
Mobile Power Inverter
Slimline Style

Targus®

Power / Fault Indicator

This light will turn off if the inverter encounters problems.

LED is ON – Normal operation.
LED is flashing – Low voltage warning signal indicates the supply voltage is low.
LED is OFF – Unit is off and no power is being output. Either the inverter is not plugged into a powered socket or it has gone into protection mode due to overheating, overvoltage, overloading or short circuit.

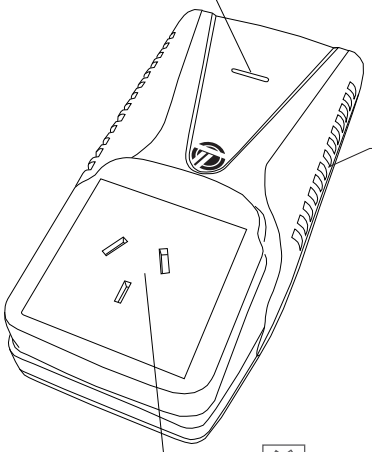

AC output

Ventilation openings
WARNING

- Do not block or cover any louvered vents. Place the inverter on a flat surface with good ventilation between 0-35 ^{0}C and ideally 15-25 ^{0}C.
- Do not place the inverter on or near a heating vent or any piece of heat generating equipment. Keep inverter away from direct sunlight.
- Do not allow water or other liquids to come into contact with the inverter.

Typical Usage

This listing is for reference purpose only. Some devices exceed the wattages listed. Before using the device, please refer to the owner's manual for actual wattage required.

Play Station	10 Watt
Cellular Phone Charger	25 Watt
Portable Color Printer	30 Watt
Hi-Fi 4 head Stero VCR	40 Watt
Notebook computer	50 Watt
13" color TV	70 Watt
CD Player	85 Watt
Work Light	100 Watt
Fax Machine	170 Watt

Fuse
CAUTION

This inverter is fitted with a spade type 32Vdc 20A fuse. Once the fuse blows, replace with a same specification and type fuse. Usage of another type fuse or metal wire will cause abnormal overheating or even fire hazards.

Note: When replacing the fuse, please make sure that all the electrical device(s) are turned off and the power cables are unplugged. Make sure the fuse is replaced correctly and before reconnecting the device(s).

WARNING

Any electric appliance with the power consumption beyond 150W is not allowed. This inverter is not recommended for use with inductive loads, such as fluorescent lamps or pumps and most heat generation equipment such as hair dryers, coffee makers, irons, heaters and toasters. Permanent damage to the unit and excessive overheating may result.

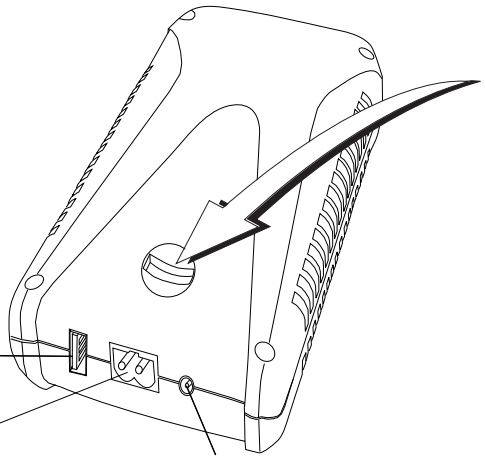

USB Output
(DC power only)

Hypertronics to CLA Car / Plane adapter

DC In-Auto connector
DC In-Air connector (for airline compatibility, go to Web site below)
http://www.targus.com/

Electrical Ratings:
Isolated Inverter
Input: 12-16= 20A max
AC Output: 240V~ 50Hz 150W
USB Output: 5V= 0.5A
PPS Output: 12-16V= 0.85A
For indoor use only
Operating Period: 6 hours

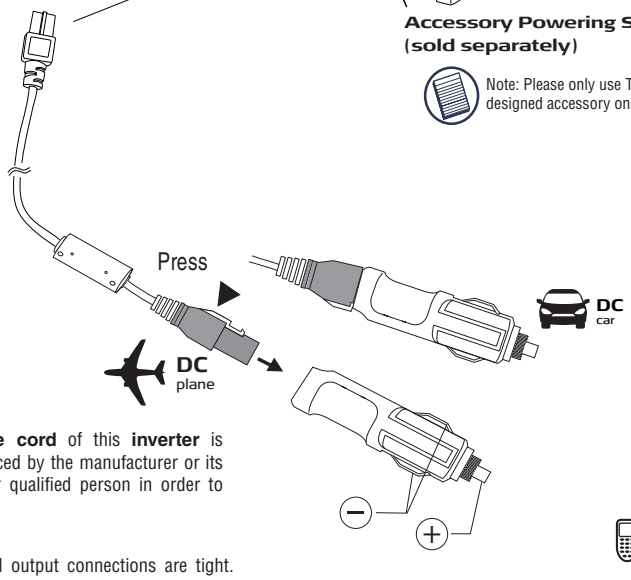

Accessory Powering System cable (sold separately)

Note: Please only use Targus designed accessory only

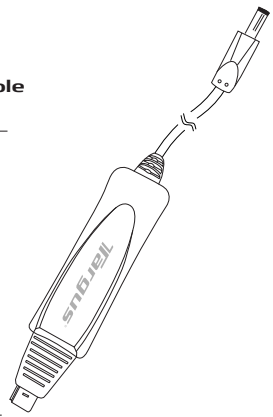

Digital Device tip (sold seperately)
For tip compatibility, go to Web site below.
http://www.targus.com/

WARNING

If the **external flexible cord** of this **inverter** is damaged, it shall be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

CAUTION

Regularly check input and output connections are tight. Loose connections can generate harmful heat and / or damage the inverter or power source. Prevent shock hazard.

Quick Start Guide

Features and specifications subject to change without notice. © 2007, Targus Australia Pty Ltd 117-119 Bowden Street, Meadowbank NSW 2114 Australia. APV14AU / 410-0893-009A

Trouble Shooting

Problem: No Power Output, indicator not ON
Possible causes and suggestions:

• **The Car's battery is low (<11.5Vdc) or defective**
Start the engine to recharge or replace the car's battery if needed. Disconnect the input cable before starting the car's engine to minimize power surge. If such a case occurs, reconnect the cable to resume normal operation.

• **Connection cable is not secured**
Reconnect the cables and make sure all plugs are secured.

• **Equipment being operated draws too much power**
Reduce load to continuous 150 watts or below and use equipment with starting surge power within inverter capability.

• **Inverter in thermal shut down condition**
Allow the inverter to cool down. Ensure there is ventilation around the unit.

• **Inverter Fuse blown**
Unplug the power cable and replace the fuse following fuse replacement instruction.

• **Automotive Fuse for Cigarette Lighter Blown**
Check and replace the fuse for your car's cigarette lighter following the instructions in your car's service manual.

Problem: Low Output Voltage
Possible cause and suggestions:

• Inverter is overloaded
Reduce load to continuous 150 watts or below to maintain regulation.

• Input voltage below 11.5Vdc
Keep input voltage above 12Vdc to maintain regulation. Replace the car's battery if needed.

Safety Precautions

• This device outputs 240 Volts of electricity just as a wall socket does. Exercise extreme care that nothing comes in contact with the AC connector.

• Do not use in the presence of water or moisture.

• Do not use or place the inverter near flammable materials or any locations that may accumulate flammable fumes or gases.

• To avoid potential property damage, do not leave this inverter or any device operating unattended in vehicle.

• Always disconnect the input to the inverter when it is not in use.

• Disconnect the input cable before starting your car to minimize surges.

• Reverse polarity connection will result in a blown fuse and may cause permanent damage to the inverter (Damage due to reversed polarity is not covered by our warranty).

• Do not connect to AC distribution wiring.

• Improper use of this inverter can cause personal injury, property damage, and or loss of life.

• This is not a toy. Keep away from reach of children.

• Indoor use only.

• The maximum in-seat DC power on an airplane is 75 Watts.Exceed this limit may shut down the in-seat power system.

Technical Support

For technical questions, please visit:

US
Internet: www.targus.com/support.asp

Australia
Internet: www.targus.com/au
Email: infoaust@targus.com
Telephone: 1800-641-645

New Zealand
Telephone: 0800-633-222

Product Registration

Targus recommends that you register your Targus accessory shortly after purchasing it. To register your Targus accessory, go to: http://www.targus.com/registration.asp
You will need to provide your full name, email address, phone number, and company information (if applicable).

Warranty

Targus warrants this product to be free from defects in materials and workmanship for one year. If your Targus accessory is found to be defective within that time, we will promptly repair or replace it. This warranty does not cover accidental damage, wear and tear, or consequential or incidental loss. Under no conditions is Targus liable for loss of, or damage to a computer; nor loss of, or damage to, programs, records, or data; nor any consequential or incidental damages, even if Targus has been informed of their possibility. This warranty does not affect your statutory rights.

N2953

Quick Start Guide

Features and specifications subject to change without notice. © 2007, Targus Australia Pty Ltd 117-119 Bowden Street, Meadowbank NSW 2114 Australia.